


# PMBus Commands

Each PMBus command can be selected and the values read or written to.

Depending on command it may be read or write only. In such case the different buttons get grayed out.

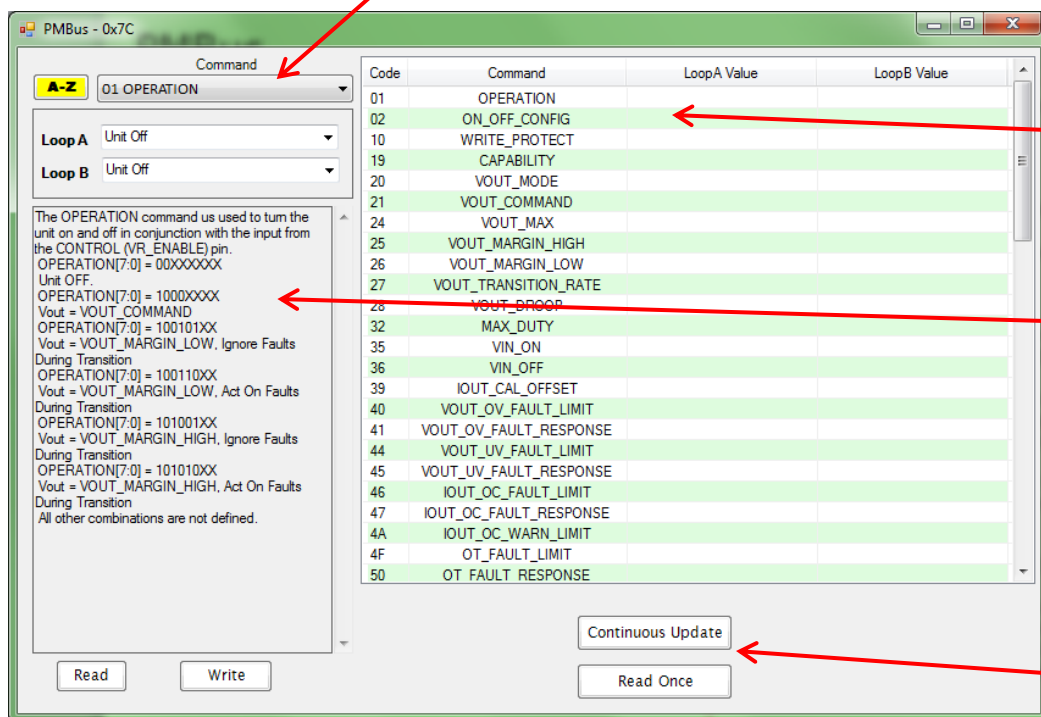

List of each PMBus command and if a controller is connected it will read out the settings and list them in easy to read formats.

Volt, Ampere etc...

The selected PMBus command is explained with more details

**Continuous Update** – reads the PMBus continuously.

**Read Once** – Read PMBus once every time button is clicked

# PMBus Configuration

Vout related commands

Reads Vout Mode register which tells what VID table is used

Selection of Margin voltages ( if used) and the configuration of the Operation command.

A pull down menu for the different possible settings.

**Start up Logic**– select if enable pin and/or software command to enable Vout.

**VREN polarity**– select polarity for Enable pin