


# Phase & Frequency...

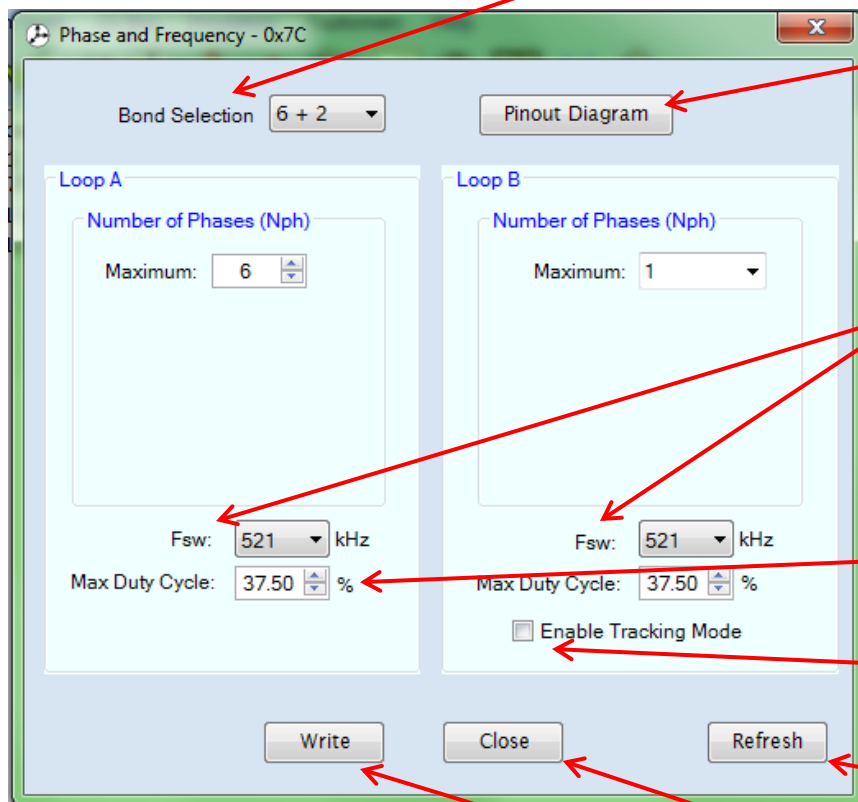

**Bond Selection:** Here the maximum number of phases can be selected. Depending on which partnumber there will be more or less combinations to select from.

After selection of phases the **Pinout Diagram** button can display what pins are assigned to which signal

**Fsw:** opens a menu with different switching frequencies to select from. Note that depending on number of phases in a loop available frequencies may differ slightly due to internal division ratios.

**Max Duty cycle:** Maximum dutycycle allowed for PWM signal

**Enable Tracking mode:** LoopB tracks loopA

**Refresh Button:** Restore the values entered to values before they got changed

**Close button:** close window without saving

**Write button:** save the settings